

11bits data (1 start bit, 8 data bit, 1 none check bit, 1 stop bit)

Communication commands will choose CRC check (2bytes)

Meter ID will use 01 as default, baud rate 9600bps, but 1200bps、 2400bps、 4800bps(optional)

Meter ID (default)	Function Code	Register Address	Contents	Register No.	Read/Write	length	data mode
01	03	0000	Serial number	1	Read	4	
01	03	0002	Meter ID	2	Read	2	
01	03	0003	Baud Rate	3	Read	2	
01	03	0004	Software Version	4	Read	4	float
01	03	0006	Hardware Version	5	Read	4	float
01	03	0008	CT Rate	6	Read	2	
01	03	0009	S0 output rate	7	Read	4	float
01	03	000B	A3	8	Read	2	
01	03	000D	Cycle time	10	Read	2	
01	03	000E	L1 Voltage	11	Read	4	float
01	03	0010	L2 Voltage	12	Read	4	float
01	03	0012	L3 Voltage	13	Read	4	float
01	03	0014	Grid Frequency	14	Read	4	float
01	03	0016	L1 Current	15	Read	4	float
01	03	0018	L2 Current	16	Read	4	float
01	03	001A	L3 Current	17	Read	4	float
01	03	001C	Total Active Power X	18	Read	4	float
01	03	001E	L1 Active Power	19	Read	4	float
01	03	0020	L2 Active Power	20	Read	4	float
01	03	0022	L3 Active Power	21	Read	4	float
01	03	0024	Total reactive power X	22	Read	4	float
01	03	0026	L1 reactive power	23	Read	4	float
01	03	0028	L2 reactive power	24	Read	4	float
01	03	002A	L3 reactive power	25	Read	4	float
01	03	002C	Total Apparent Power X	26	Read	4	float
01	03	002E	L1 Apparent Power	27	Read	4	float
01	03	0030	L2 Apparent Power	28	Read	4	float
01	03	0032	L3 Apparent Power	29	Read	4	float
01	03	0034	Total Power Factor X	30	Read	4	float
01	03	0036	Power Factor	31	Read	4	float
01	03	0038	Power Factor	32	Read	4	float
01	03	003A	Power Factor	33	Read	4	float
01	03	0041	CRC	33	Read	2	
01	03	0042	Combined Code X	33	Read	2	

Correct Respond: 01(default) 03 02 data H 8bits data L 8bits CRC CRC

Incorrect Respond: 01(default) 83 wrong information code (address error and CRC error no return)

01	03	0100	Total Active Energy X	35	Read	4	float
01	03	0102	L1 Total Active Energy	36	Read	4	float
01	03	0104	L2 Total Active Energy	37	Read	4	float
01	03	0106	L3 Total Active Energy	38	Read	4	float
01	03	0108	Forward Active Energy X	39	Read	4	float
01	03	010A	L1 Forward Active Energy	40	Read	4	float
01	03	010C	L2 Forward Active Energy	41	Read	4	float
01	03	010E	L3 Forward Active Energy	42	Read	4	float
01	03	0110	Reverse Active Energy X	43	Read	4	float
01	03	0112	L1 Reverse Active Energy	44	Read	4	float
01	03	0114	L2 Reverse Active Energy	45	Read	4	float
01	03	0116	L3 Reverse Active Energy	46	Read	4	float
01	03	0118	Total Reactive Energy X	47	Read	4	float
01	03	011A	L1 Reactive Energy	48	Read	4	float
01	03	011C	L2 Reactive Energy	49	Read	4	float
01	03	011E	L3 Reactive Energy	50	Read	4	float
01	03	0120	Forward Reactive Energy X	51	Read	4	float
01	03	0122	L1 Forward Reactive Energy	52	Read	4	float
01	03	0124	L2 Forward Reactive Energy	53	Read	4	float

01	03	0126	L3 Forward Reactive Energy	54	Read	4	float
01	03	0128	Reverse Reactive Energy ✓	55	Read	4	float
01	03	012A	L1 Reverse Reactive Energy	56	Read	4	float
01	03	012C	L2 Reverse Reactive Energy	57	Read	4	float
01	03	012E	L3 Reverse Reactive Energy	58	Read	4	float

Correct Respond: 01(default) 03 04 data H 8bits data L 8bits CRC CRC

Incorrect Respond: 01(default) 83 Wrong information code(address error and CRC error no return)

01	06	0002	Meter ID	1	Write	2	
01	06	0003	Baud Rate	2	Write	2	
01	10	0009	SO OUTPUT	4	Write	4	float
01	06	0042	Combined Code	5	Write	2	
01	06	000D	Cycle time	7	Write	2	

Correct Respond: 01(default) 06 register address H 8bits register address L 8bits data H 8bits data L 8bits C

Incorrect Respond: 01(default) 86 Wrong information code (address error and CRC error no return)

Wrong Function Code

- 01 The received function code is invalid
- 02 Received register address is not existing
- 03 The received data is not comply with the requirement, generally writing data exceeds range
- 04 Equipment error, this program is not used